



Transmission Case and 6th Gear Assembly

34. Install the Steel Ball and Pressure Spring into the bottom of the transmission

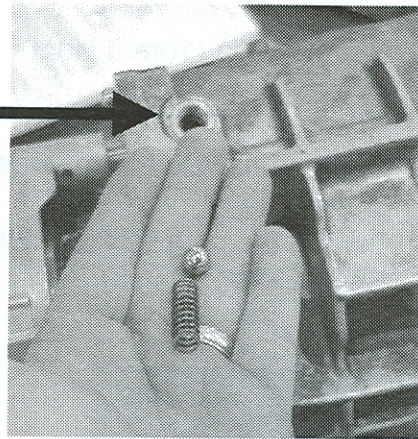

35. Apply sealant to the Plug (T-30 Torx)

- Torque the plug 13.8 to 23.5 Nm (122 to 208 inlb)

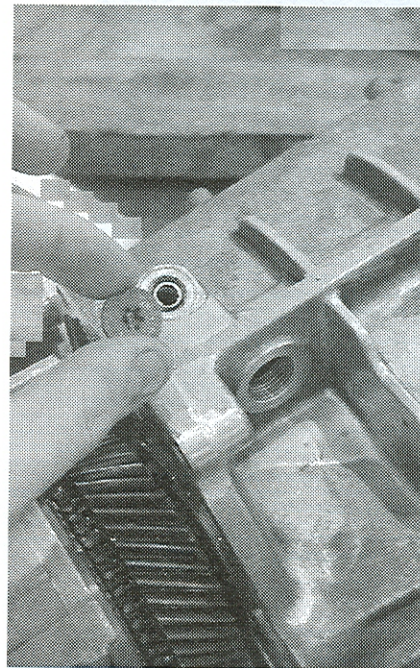

36. Install a **new** Spring Pin to 6th shift fork

- The notch in the rod should point towards the other shift rod

